

## Inclination mode ON



Turn laser OFF


Press button  
for 3 sec.

## Levelling/inclination mode



- green = levelling mode
- red = inclination mode

## Inclination mode

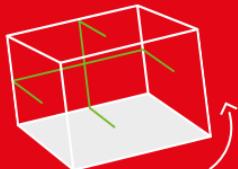

Blinking line

## Pulse mode



Permanently ON  
and ready for use  
with laser receiver.

# Quick Start

## X2 GREEN



1 ON/OFF switch

2 Horizontal/vertical line,  
inclination

### ON/OFF switch



ON ⤵



OFF ⤵

### Horizontal line ON/OFF


H/V



Press 1x

H/V

### Laser lines ON

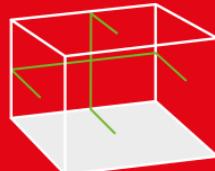

ON ⤵

### Vertical line ON/OFF

H/V



Press 1x

H/V

**SOLA-Messwerkzeuge GmbH**

Unteres Tobel 25  
6840 Götzis, Austria  
T +43 5523 53380-0  
sola@sola.at, www.sola.at



Please find the operating instructions  
on [www.sola.at](http://www.sola.at)

R373297

